



# Support & Downloads: EB-W31



[Return back to support options for Epson EB-W31](#)

[Print](#)

## Wireless Projector Setup

This article will guide you through the wireless setup options of Epson projectors using the Epson ELPAP07 and ELPAP10 wireless adapter.

### Installing the Wireless LAN Module

### Using Quick Wireless Connection (Windows Only)

### Selecting Wireless Network Settings Manually

### Searching for a Wireless Network

 
You can use your projector's site survey function to quickly locate and connect to available wireless networks.

#### Note:


##### Connection modes available on Epson projectors:

- Set to **Advanced Mode** in order to make an Infrastructure network connection.
- Set to **Quick Mode** in order to make an Point to point connection.


1. Turn on the projector.
2. Press the **Menu** button
3. Select the **Network** menu and press **Enter**.

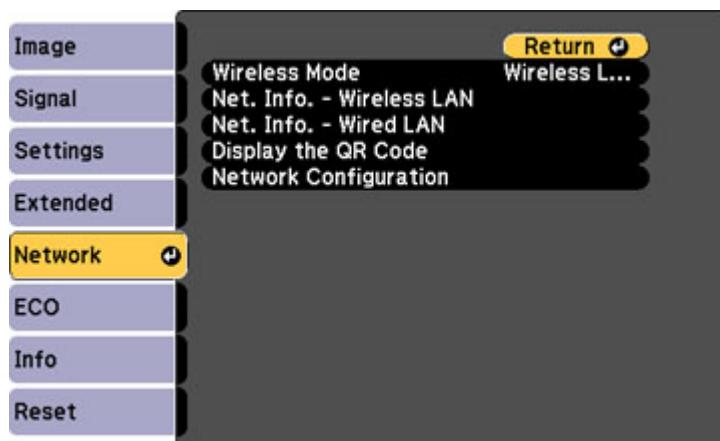

 
4. Select **Network Configuration** and press **Enter**.
5. Select the **Wireless LAN** menu and press **Enter**.

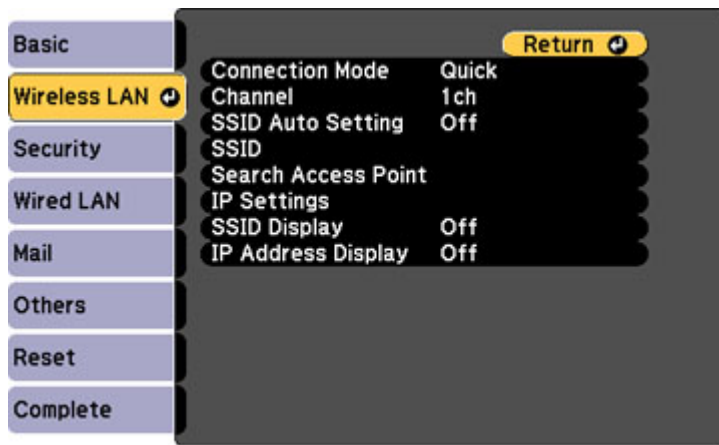

 6. Select **Advanced** as the Connection Mode setting and press **Enter**.
7. Select **Search Access Point** and press **Enter**.

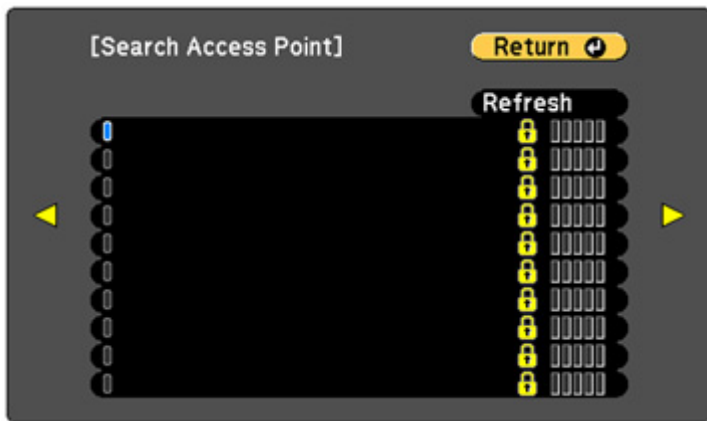

 8. Select the name of the wireless network you want to connect to and press **Enter**.
9. If the network has security enabled, enter the wireless password. You see a screen like this:

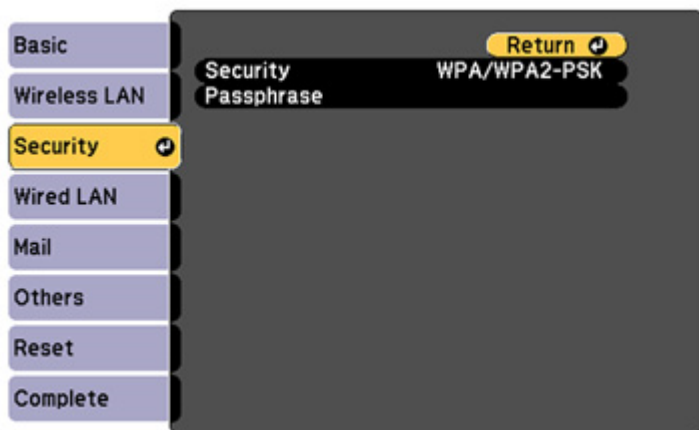

10. Select the settings on the security menu as necessary for your network.
11. When you finish selecting settings, select **Complete** and follow the on-screen instructions to save your settings and exit the menus.

## Selecting Wireless Network Settings in Windows

## Selecting Wireless Network Settings in OS X

## Setting Up Wireless Network Security

## Using a QR Code to Connect a Mobile Device

## Supported Models

Did you find this article helpful

Yes  No