



# Support & Downloads: EB-W31



[Return back to support options for Epson EB-W31](#)

[Print](#)

## Wireless Projector Setup

This article will guide you through the wireless setup options of Epson projectors using the Epson ELPAP07 and ELPAP10 wireless adapter.

### Installing the Wireless LAN Module

### Using Quick Wireless Connection (Windows Only)

### Selecting Wireless Network Settings Manually

### Searching for a Wireless Network

### Selecting Wireless Network Settings in Windows

### Selecting Wireless Network Settings in OS X

### Setting Up Wireless Network Security

You can set up security for your projector to use on the wireless network. Set up one of the following security options to match the settings used on your network:


- WEP encryption
- WPA security



#### Note:

Check with your network administrator for guidance on entering the correct information.

1. Turn on the projector.
2. Press the **Menu** button
3. Select the **Network** menu and press **Enter**.
4. Select **Network Configuration** and press **Enter**.
5. Select the **Security** menu and press **Enter**.

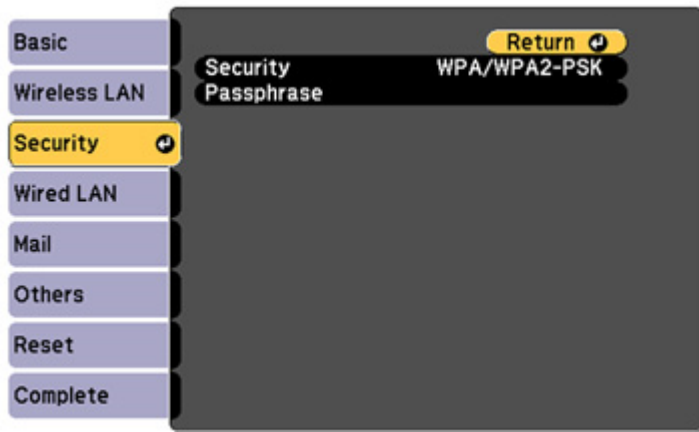

6. Select the security settings as necessary to match your network settings.
7. When you finish selecting settings, select **Complete** and follow the on-screen instructions to save your settings and exit the menus.

### Wireless Security Menu Settings

Setting	Options	Description
<b>Security</b>	<b>WPA2-PSK</b> and <b>WPA</b> types available	Selects the type of security used on the wireless network
<b>Passphrase</b>	Various keys from 8 to 32 characters	Selects the pre-shared key used on the network; passphrases are case-sensitive

### Using a QR Code to Connect a Mobile Device

#### Supported Models

Did you find this article helpful

Yes  No