



# Support & Downloads: EB-W31



[Return back to support options for Epson EB-W31](#)

[Print](#)

## Wireless Projector Setup

This article will guide you through the wireless setup options of Epson projectors using the Epson ELPAP07 and ELPAP10 wireless adapter.

### Installing the Wireless LAN Module

### Using Quick Wireless Connection (Windows Only)

### Selecting Wireless Network Settings Manually

### Searching for a Wireless Network

### Selecting Wireless Network Settings in Windows

Before connecting to the projector, select the correct wireless network on your computer.

1. To access your wireless utility software, access the Desktop and double-click the network icon on the Windows taskbar.
2. Do one of the following:
  - If your projector is set up on an existing network (Advanced mode), select the network name (SSID).
  - If your projector is configured for Quick mode, select the projector's SSID.
3. Click **Connect**.

### Selecting Wireless Network Settings in OS X

### Setting Up Wireless Network Security

### Using a QR Code to Connect a Mobile Device

### Supported Models

Did you find this article helpful

Yes  No